




### Tesla Powerwall 3: LED Statuses

Beginning with Powerwall software version 24.12, the logo LED on the front of Powerwall 3 can display the following statuses:

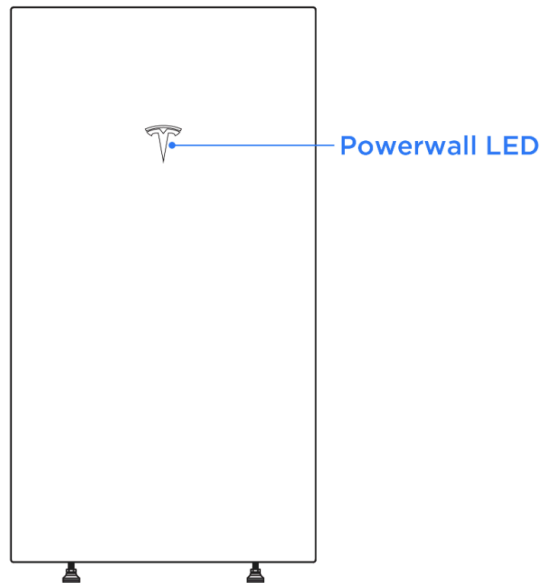

LED State	Indication
Solid white	Normal operation
Flashing white	Powerwall 3 is idle. Will enter sleep state if no actions in progress
Off	Powerwall 3 is off or in sleep state
Flashing Red	Inverter (PWS) fault, e.g. AFCI or GFCI, RSD, etc.

If you ever have any questions regarding your PV Squared installed Powerwall 3, please reach out to us [service@pvsquared.coop](mailto:service@pvsquared.coop). We're always happy to help!